

MAXIM[®]

Oven-N-Grill Cleaner

Features:

Works in Minutes

Quickly Cuts Through Heavy Grease

Removes Baked-on Foods and Carbon

Description

This product is formulated for hard-to-clean institutional ovens and cooking utensils. This product works extremely well on outdoor barbecue grills, both gas and charcoal.

Ovens, pots, and pans are cleaned easily with far less effort than with conventional cleaners. This product shines stainless steel to look like new.

Directions

CAUTION: Do not spray on asphalt, tile or painted surfaces, linoleum or aluminum. Do not spray on electrical connections.

- 1 Turn off current in electric ovens and pilot lights in gas ovens.
- 2 Shake well.
- 3 From a distance of 9-12 inches, spray a liberal amount of product on the surface.
- 4 Allow the chemicals to dwell for 5-10 minutes on warm surfaces and 10-20 minutes on cool surfaces.
- 5 Repeat the process in cases of heavy caking.
- 6 With a paper towel or clean cloth wipe the surface clean.
- 7 After removing cleaner, wash surface with potable water to remove all remaining cleaner.



Applications

For institutional:

- > Ovens
- > Stainless steel and utensils
- > Gas and charcoal barbecue grills

Specifications

Color	Colorless
Fragrance	Characteristic
pH Range	13.0 - 14.0
Dilution	Aerosol
Density	8.41

Packaging

6/19 oz. can

255500-19